

# PacketController Subscriber Portal

Version: 7.0

Updated: Nov. 2020

**PacketController Network** 

#### **Disclaimer**

THIS DOCUMENT IS PROVIDED "AS IS" WITHOUT ANY EXPRESS OR IMPLIED WARRANTY OF ANY KIND, INCLUDING WARRANTIES OF MERCHANTABILITY, NONINFRINGEMENT OF INTELLECTUAL PROPERTY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT SHALL PACKETCONTROLLER NETWORKS OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS DOCUMENT, OR THE PRODUCTS DESCRIBED HEREIN, EVEN IF PACKETCONTROLLER NETWORKS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME JURISDICTIONS PROHIBIT THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. PacketController Networks and its suppliers further do not warrant the accuracy or completeness of the information, text, graphics, links or other items contained within this document, or assume liability for any incidental, indirect, special or consequential damages in connection with the furnishing, performance, or use of this document. PacketController Networks may make changes to this document, or to the products described herein, at any time without notice. PacketController Networks makes no commitment to update this document.

## **Table of Contents**


Overview	4
Credential of Subscriber Portal	4
Subscriber Portal	
Login	4
Dashboard	5
Long-term Report	
Real Time Graph	
Export	

#### **Overview**

PacketController has built-in subscriber portal which is for each and every subscriber to login to check its own set of bandwidth usage/report/graph.

#### **Credential of Subscriber Portal**

The credential of subscriber portal is configured per subscriber.

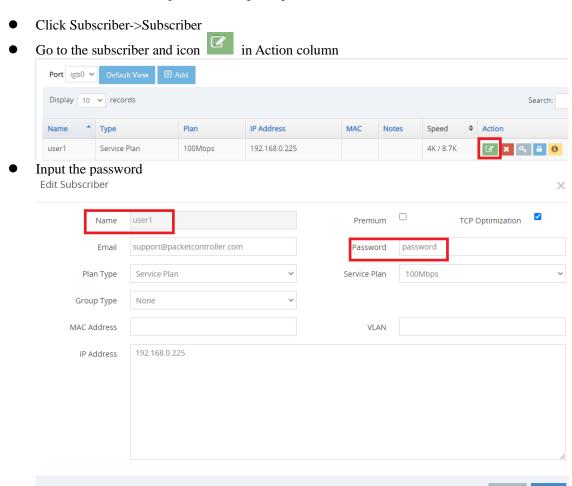


Click Save button

*Notes:* The name and password are credential of subscriber portal, in the example above, the credential is user1/password.

#### **Subscriber Portal**


#### Login

- The subscriber portal can be accessed at <a href="https://Management">HTTP://Management</a>
- The login page as below

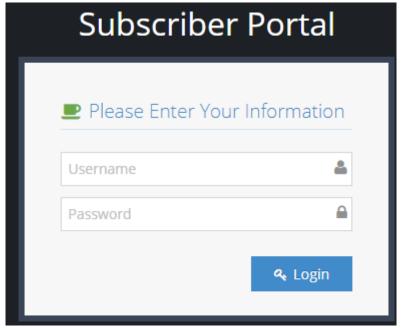


• Input username and password, then click **Login** button

### **Dashboard**

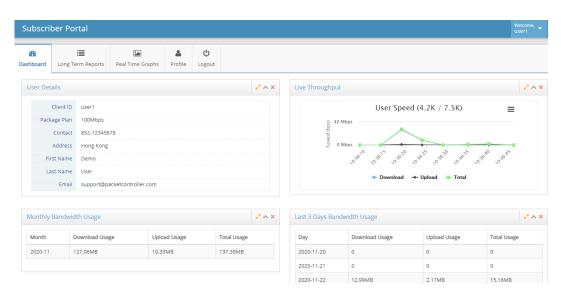


### **Long-term Report**

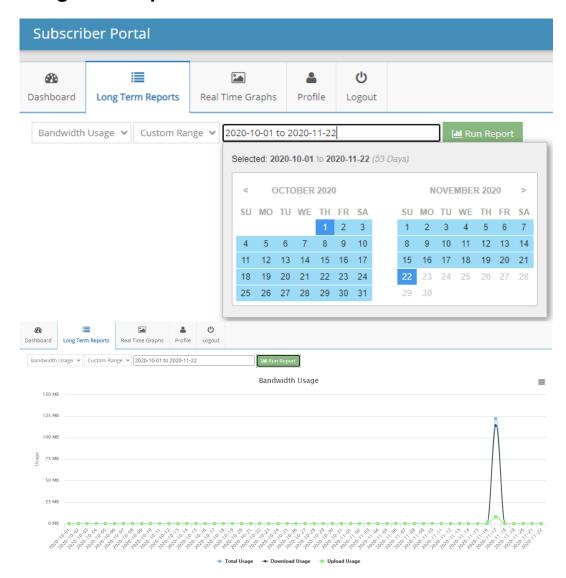

### **Real Time Graph**

The user speed and PPS can be selected in real time graph.

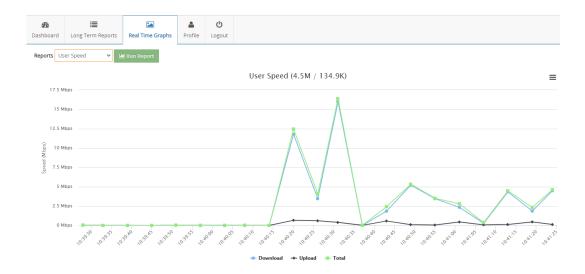

### **Export**

